



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: MAN31CON/13709

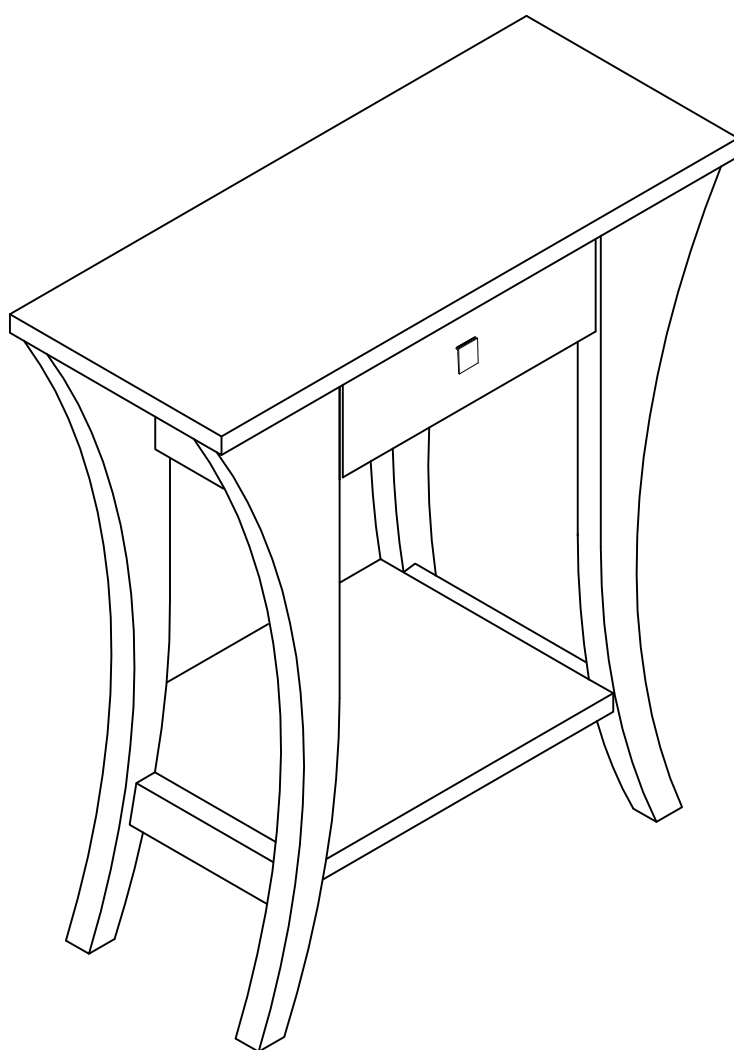

PARTS IDENTIFICATIONS / IDENTIFICATION DES PIECES





ITEM NO/NO ARTICLE: MAN31CON/13709

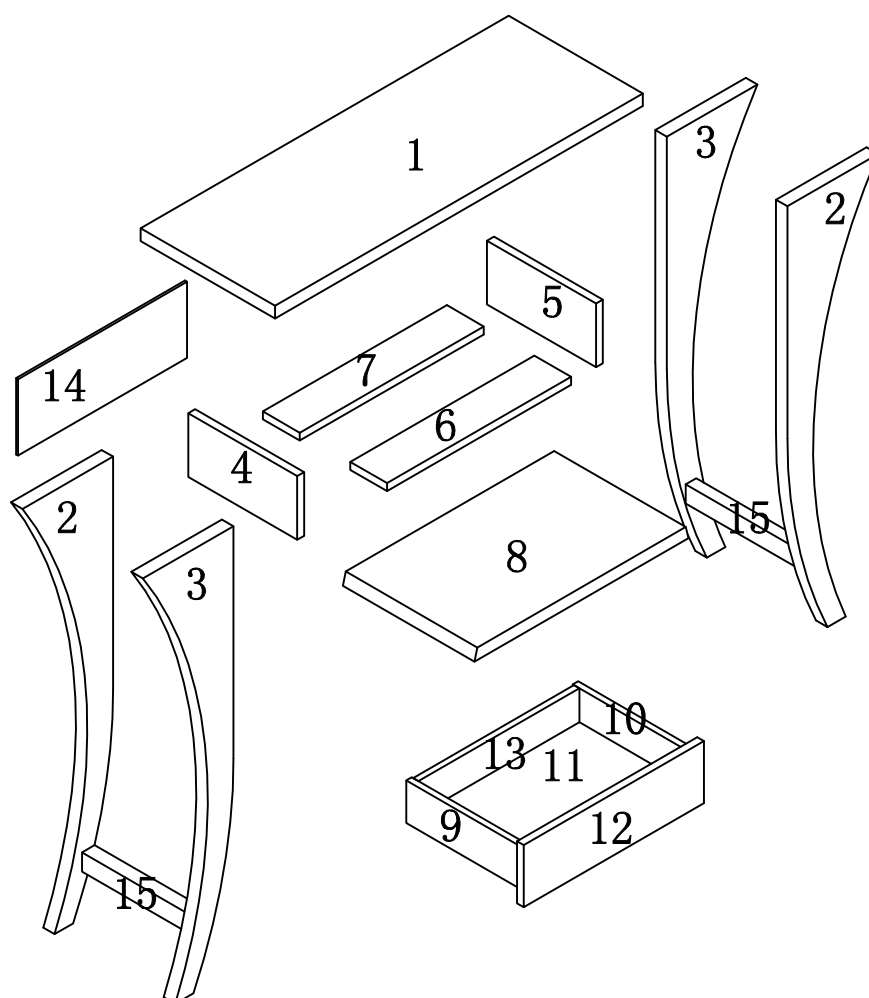


(1)	1pc/pce	(9)	1pc/pce
(2)	2pcs/pce	(10)	1pc/pce
(3)	2pcs/pce	(11)	1pc/pce
(4)	1pc/pce	(12)	1pc/pce
(5)	1pc/pce	(13)	1pc/pce
(6)	1pc/pce	(14)	1pc/pce
(7)	1pc/pce	(15)	2pcs/pce
(8)	1pc/pce		

HARDWARE IDENTIFICATIONS/ IDENTIFICATION DU KIT D'ASSEMBLAGE

ITEM NO/NO ARTICLE: MAN31CON/13709


A		L29	26pcs/pces	
B		ø15	26pcs/pces	
C		ø8×25	22pcs/pces	
D		ø4×30	4pcs/pces	
E		ø4×10	1set/pce	
F		48×48×14	1pc/pce	
G		L20	4pcs/pces	
H		ø12	4pcs/pces	
I		ø20	8pcs/pces	
J		Z1016	20pcs/pces	
K		197×5×1	1pc/pce	
L		ø4×25	1pc/pce	
M		ø5×40	1pc/pce	
N		ø8×40	1pc/pce	
O		ø16	4pcs/pces	
P		12×12×1	2pcs/pces	
Q		Glue: For securing please apply to wood dowel first before inserting into panel. Colle: Appliquez de la colle sur les goujons en bois avant de les insérer dans le panneau.		1pc/pces

ITEM NO/NO ARTICLE: MAN31CON/13709

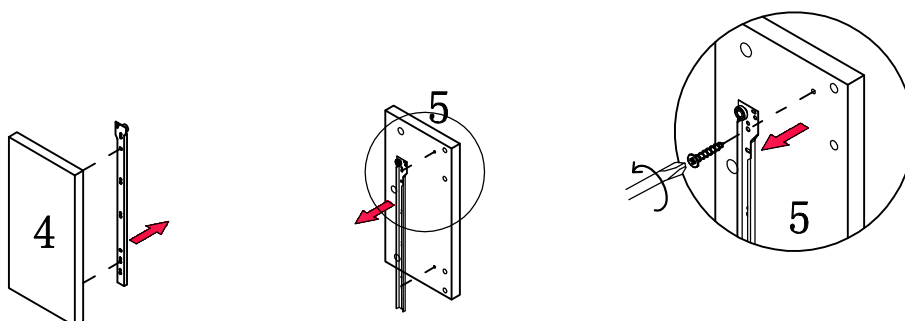



STEP 1 / ETAPE 1

STEP 2 / ETAPE 2

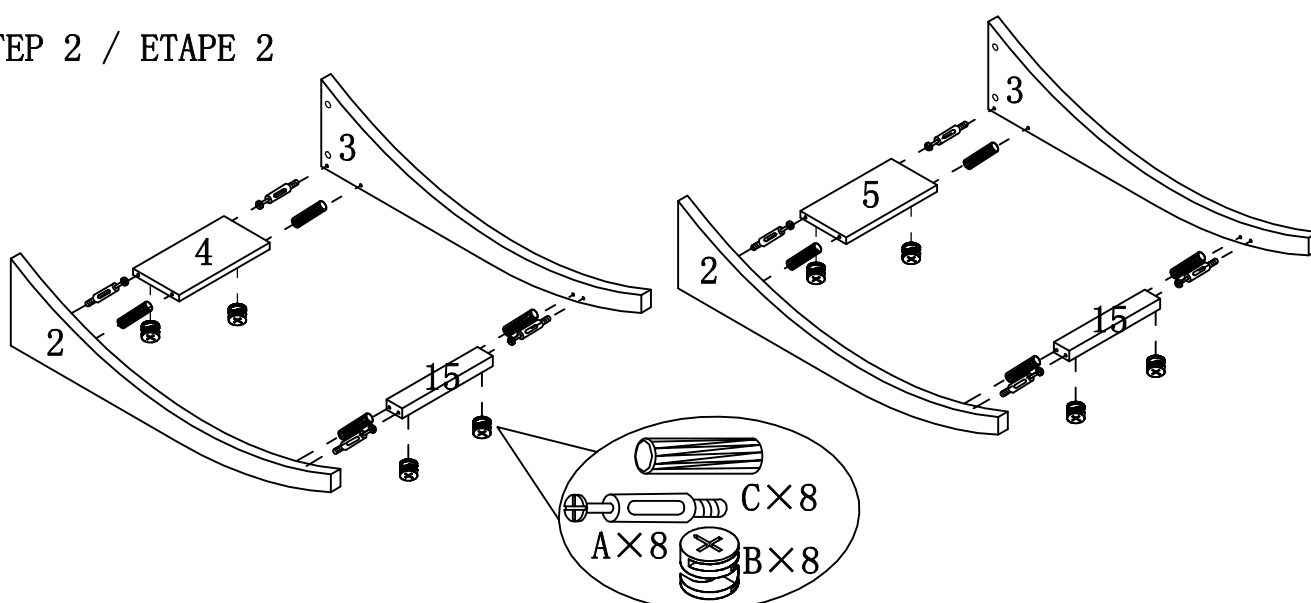


STEP 3 / ETAPE 3

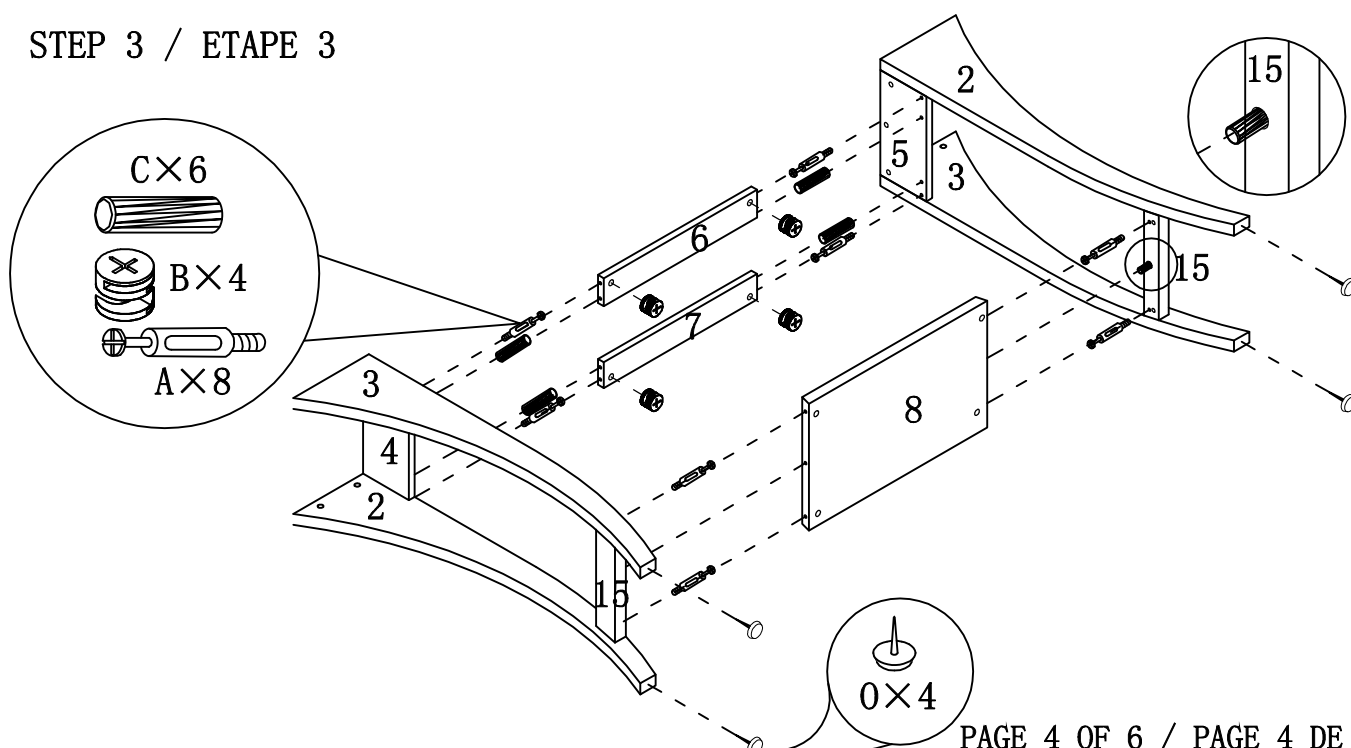

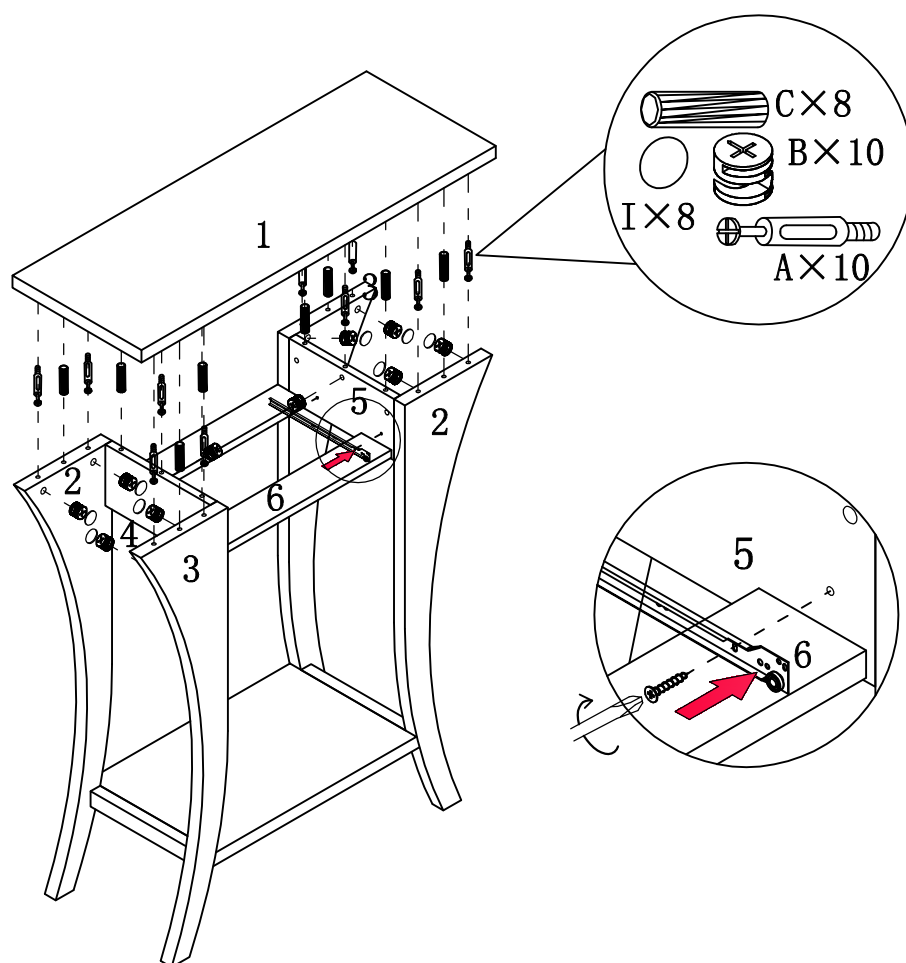


STEP 4 / ETAPE 4

STEP 5 / ETAPE 5

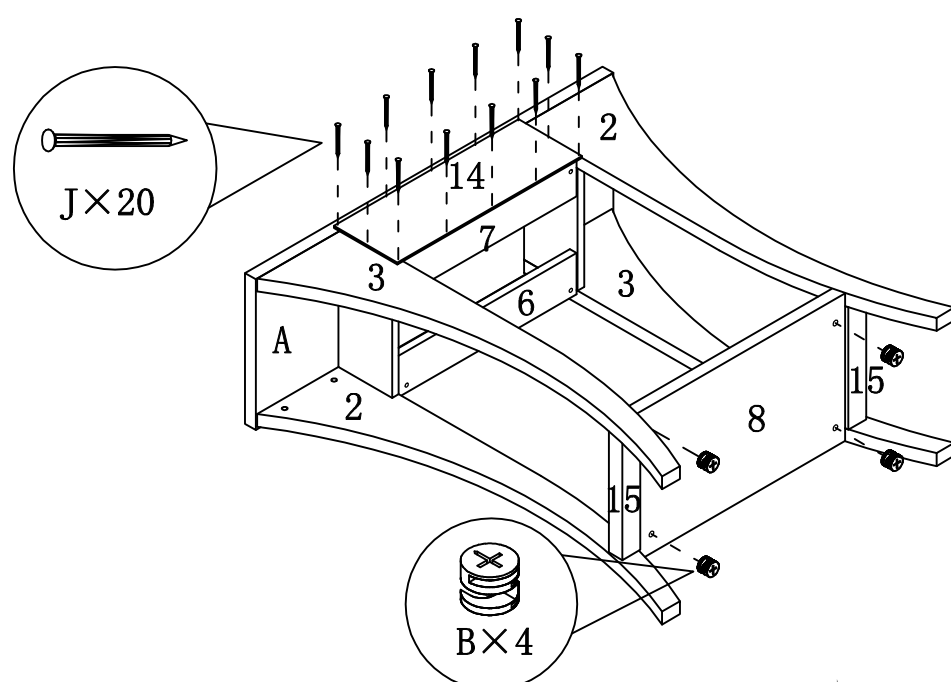


ITEM NO/NO ARTICLE: MAN31CON/13709

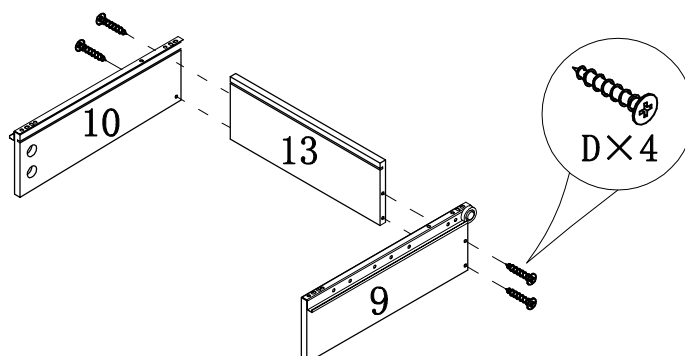


STEP 6 / ETAPE 6

STEP 7 / ETAPE 7

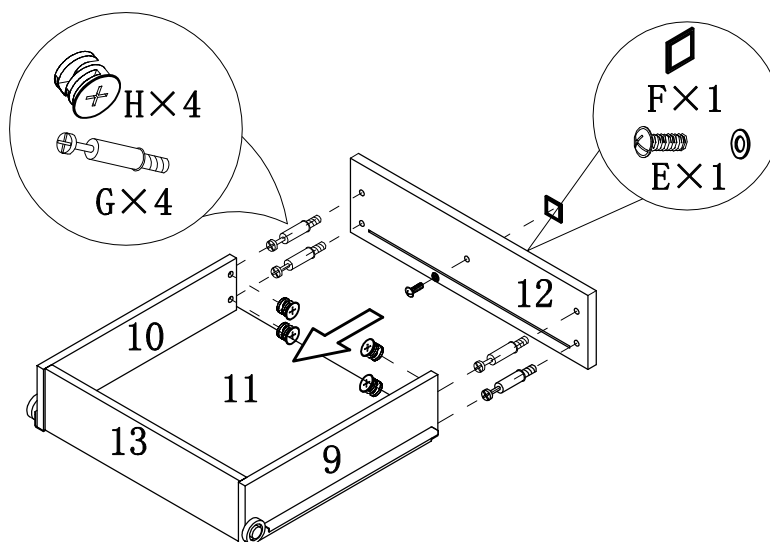


STEP 8 / ETAPE 8

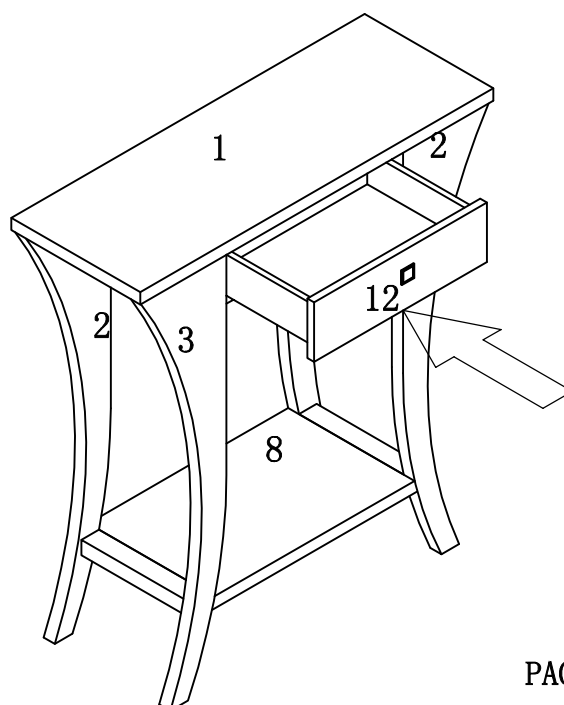


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

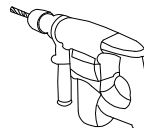


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

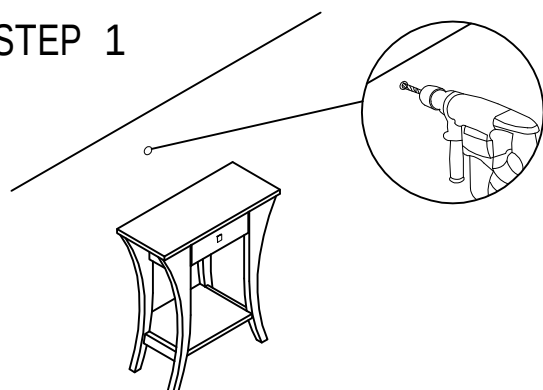


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

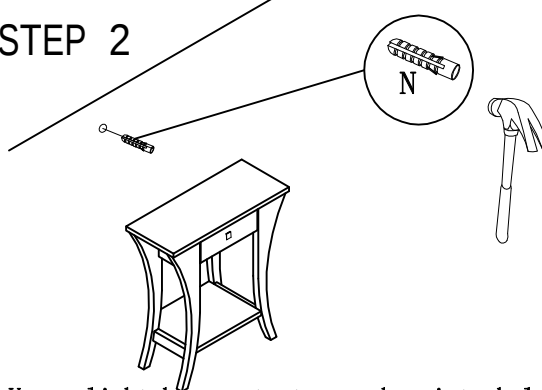


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

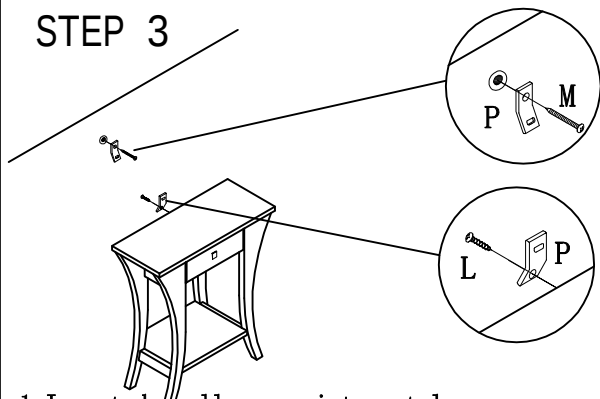

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

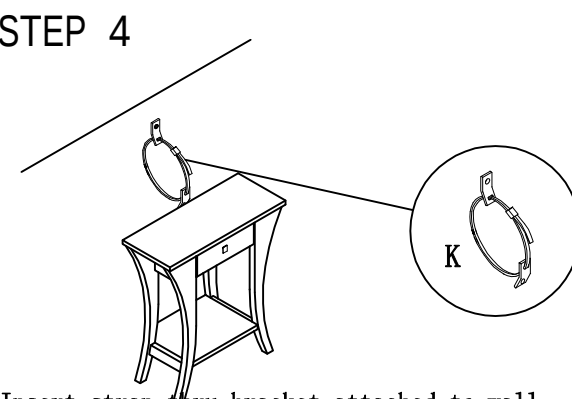

1. Insert strap thru bracket attached to wall. then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.